



PARTS LIST

MODEL NUMBER: S151JR

- 1 BODY 1BJR Brass Body 1SJR Stainless Steel Body
- ② LEVER 2LJR Lever
- ③ LEVER BOLT & BUSHING 3BBJR Bolt & Bushing
- 4 PROTECTIVE RUBBER COVER 4BJR Black Cover 4WJR White Cover
- 5 THRUST COLLAR
 5BJR Thrust Collar Brass
 5SJR Thrust Collar Stainless Steel
- 6 END ADAPTOR 6AJR End Adapter
- * 7 REPLACEABLE BARREL ASSEMBLY 7BJR Brass 7SJR Stainless Steel

MAXIMUM TEMPERATURE: 200°F MAXIMUM PRESSURE: 150 psi BRONZE WEIGHT: 2 lbs.

Hose Barb



ORDERING HOSE ADAPTORS

Specify Hose I.D. Swivel hose adaptor sizes: 5/8", 3/4" hose barb and 3/4" female garden hose fitting.

 \star Contains all internal working parts, and is normally all that is required to rebuild nozzle.

INSTRUCTIONS FOR SERVICING

- 1). Remove rubber cover by slipping cover off the back, and then pulling forward over the front of nozzle. If replacing, soak new cover in warm soapy water (liquid detergent).
- 2). Remove lever bolt & bushing (3) then pull out lever (2).
- 3). Unserew end adaptor (6), then remove barrel assembly (7) with thrust collar (5).
- 4). To insert new barrel assembly, simply reverse procedure.

HOT AND COLD WATER USE ONLY. NOT SUITABLE FOR USE ON STEAM.